


W

OCEANair DRYROLL

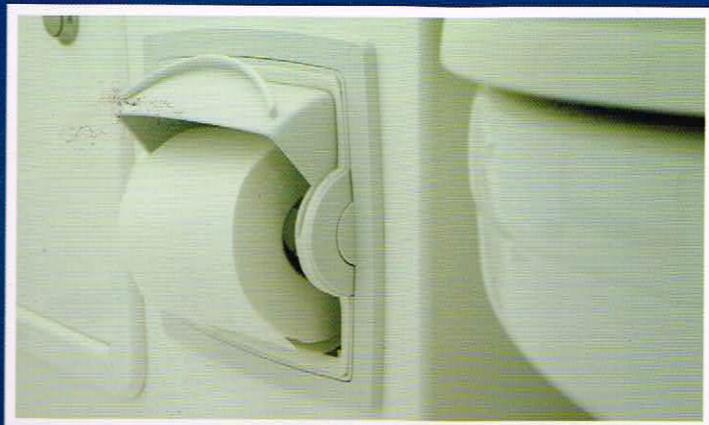

- Waterproof toilet paper dispenser with automatic delivery system
- Can be recessed or surface mounted.
- Mounting hardware included


- Easy to install, operate and clean
- Hard wearing moulded ABS plastic

www.oceanair.co.uk

- FRA
- Distributeur automatique et étanche de papier toilette
 - Encastrable ou montage en applique. Tout le matériel de montage est inclus
 - Facile à installer, à utiliser et à nettoyer
 - Plastique ABS injecté résistant à l'usure

- ITA
- Porta carta igienica a tenuta stagna con funzione automatica di rilascio
 - Può essere incassato o montato in superficie. Tutte le strutture di montaggio sono comprese nella fornitura
 - Facile da installare, utilizzare e pulire
 - In resistente plastica ABS sagomata

Recessed mounted

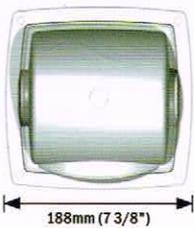

185mm
(7 1/4")

188mm (7 3/8")

Montage encastré
Montaggio Incassato

Surface mounted



155mm
(6 1/8")

158mm (6 1/4")
Montage en applique
Montaggio In superficie



74mm (2 15/16") 66mm (2 5/8")



145mm (5 11/16")

Automatic paper rewind



Enroulement automatique
Funzione automatica di riavvolgimento della carta

Automatic paper delivery



Distribution automatique
Funzione automatica di rilascio della carta

Waterproof when closed



Imperméable lorsqu'il est fermé
A tenuta stagna quando chiuso

Installation/Installation/Installazione:
www.oceanair.co.uk/dryroll

Colour
Teinte
Colori

● White Blanc Bianco	○ Beige Beige Beige
----------------------------	---------------------------



Made in the United Kingdom

INSTALLATION INSTRUCTIONS

DRYROLL


keeps your toilet roll dry

SURFACE MOUNTED

- 1 Use the template check the position and clearance of the DRYroll.
- 2 Mark the centre of hole A and pre-drill the wall.
- 3 Drill through the required screw holes (A and both B's) in the back of the DRYroll (Note these are left closed to eliminate the possibility of water seepage through any unused fixing holes).
- 4 Fit a screw into the wall at position A and tighten it leaving a 3 mm gap between the head of the screw and the wall.
- 5 Fit the DRYroll onto this screw making sure that you push the DRYroll down so that the screw head holds it up against the wall. You might need to remove the DRYroll and tighten or loosen the screw slightly to achieve a snug fit.
- 6 Once the DRYroll hangs securely on hole A check that the DryRoll is level and then mark both B holes (to access the holes open the door half way).
- 7 Remove the DryRoll and pre-drill the B holes.
- 8 Refit DryRoll onto screw A and then fit and tighten the B screws (Note Hole C is optional).


CARE AND CLEANING

- After excessive wetting wipe off surface water before opening the door.
- Clean using domestic cleaners only.
- DO NOT USE ACETONE OR SIMILAR SOLVENTS.

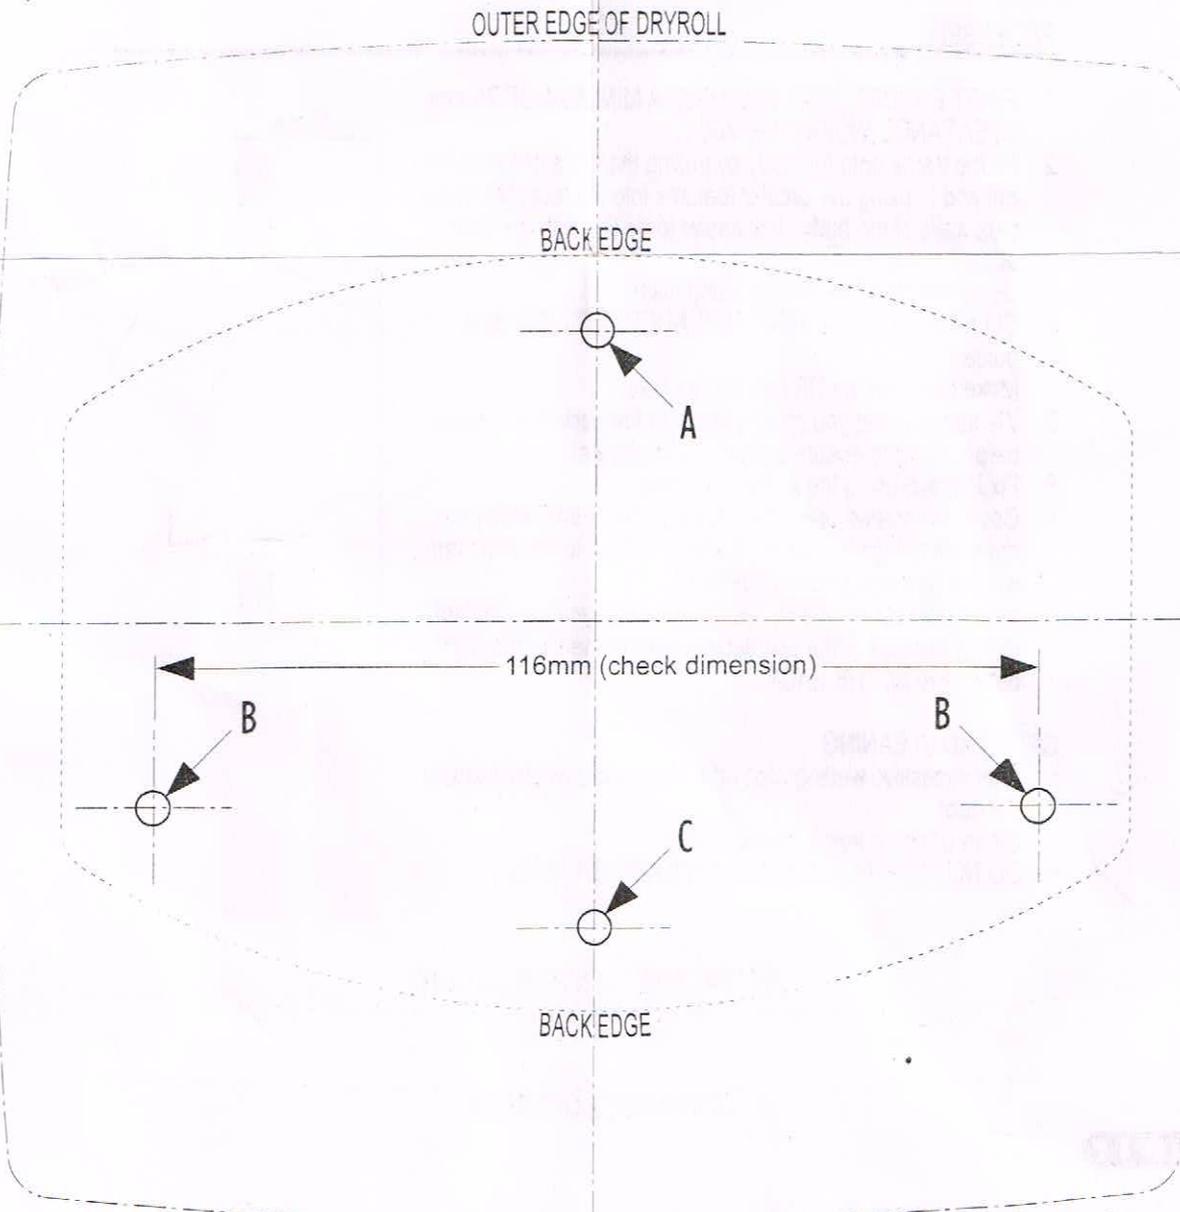

TOILET ROLL FITTING

- Always fit toilet rolls with the loose end coming over the top and down the front. This is important for the automatic-rewind feature to work properly.
- The DryRoll will fit the all toilet rolls with a few exceptions: Rolls with an inner diameter of less than 38 mm, an outer diameter of more than 120 mm or a width greater than 115 mm should be avoided.

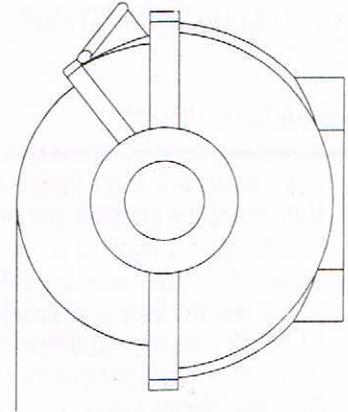

OUTER EDGE OF FRAME

CUTTING LINE

ACTUAL SIZE - MINIMUM CUT LINE


INSTALLATION INSTRUCTIONS

RECESSED

- 1 FIRST ENSURE THAT YOU HAVE A MINIMUM OF 75 mm CLEARANCE INSIDE THE WALL.
- 2 Fit the frame onto the body by pulling the sides of the frame out and hooking the circular features into the recesses in the side walls of the body. It is easier to do this with the door open.
- 3 Using this template drill the fixing holes.
- 4 Cut a hole using the 'RECOMMENDED CUT LINE' as a guide.
Make sure that the DRYroll fits the hole.
- 5 We suggest that you apply sealant to the back of the frame before fitting to ensure a good fit with the wall.
- 6 Fix in place using the screws provided.
- 7 Cover the screws using the caps provided - WARNING the caps are design to stay in - it will be difficult to remove them without damaging them once fitted.
- 8 In very wet conditions we recommend that you use sealant to seal the rear of the unit between the frame and the main body - FROM THE BACK.

CARE AND CLEANING

- After excessive wetting wipe off surface water before opening the door.
- Clean using domestic cleaners only.
- DO NOT USE ACETONE OR SIMILAR SOLVENTS.

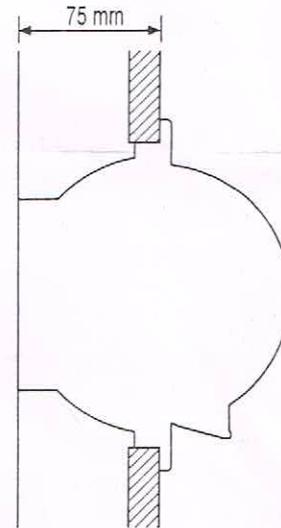

163mm (check dimension)

ACTUAL SIZE - MINIMUM CUT LINE

CUTTING LINE

OUTER EDGE OF FRAME